



24VDC SPINDLE FAN WIRING DIAGRAM

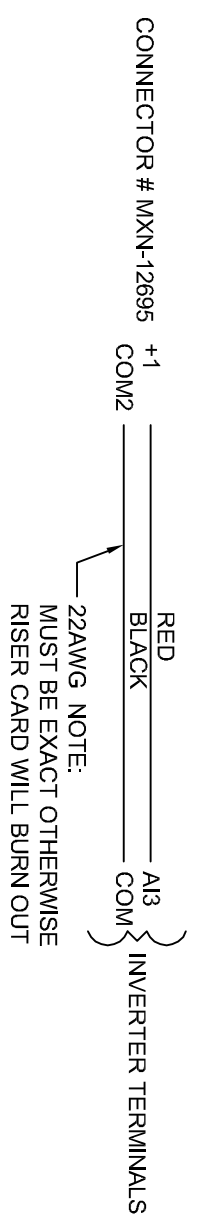

SPINDLE RPM SPEED CONTROL

NOTE: IF SPINDLE DOES NOT START
JUMP PINS 1&8 ON DB9 CONNECTOR

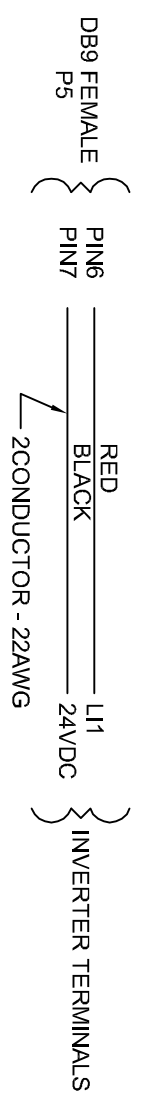

SPINDLE ON/OFF

TECHNO CNC SYSTEMS

2101 JERICHO TURNPIKE, NEW HYDE PARK, NY 11040
 PH: 516-328-3970 FAX: 516-358-2576

HSD SPINDLE WIRING DIAGRAM

MAT.		BREAK CORNERS & EDGES .015		QTY REQD:		ORIG. DATE		DRAWN BY:	
UNSPECIFIED TOLERANCES		FRAC. +/- 1/32		.XX +/- .010		UNITS:		SCALE:	
ANGLE +/- 1/2°		.XXX +/- .005						CHECKED BY:	
PART NO.								DWG NO.	

NO.	DATE	DESCRIPTION
-----	------	-------------